



Exoplanet Exploration Technology Infrastructure at JPL

Dr. Marie Levine

(818) 354-9196

marie.levine@jpl.nasa.gov

Jet Propulsion Laboratory California Institute of Technology

© 2011 California Institute of Technology Government sponsorship acknowledged



ExEP Infrastructure Support at JPL



Available Facilities

- •The following presentation provides an overview of the facilities and infrastructure that are available to support your proposal.
- It is a non-exclusive list.

How does one cost the use of ExEP facilities at JPL?

- •Some base-funding is provided for access to JPL infrastructure. However, additional labor and procurements must be costed within a proposal to support the work:
 - ➤ Directly funded through the proposal (PI-managed JPL labor & procurements)
 - Request additional infrastructure support through the Program (ExEP-managd)
 - In either case the PI remains responsible for leading the demonstrations
- •Each facility/resource is different and its use must be negotiated directly with the Program.
- •During the proposal review process, the actual cost for the use of a facility may be adjusted as to make best use of facilities and workforce, as viewed across all awards.



National Aeronautics and Space

Jet Propulsion Laboratory

Administration

Requesting Infrastructure Support



Exploration

ExoPlanet

How to request use of ExEP Infrastructure at JPL?

- Submit Preliminary Statement of Work (SOW) for use of ExEP Infrastructure to Marie Levine no later than March 4, 2011 at marie.levine@jpl.nasa.gov
- Follow SOW questionnaire on next page
- Schedule meeting w/ Marie Levine the week of 3/07/11 3/10/11 to discuss use for the facility of interest and to obtain costing guidelines
- SOW can be revised after discussions and negotiations with Marie Levine
- Marie Levine will evaluate workforce, labor and infrastructure access required across all received SOW. Assessment will be provided to Doug Hudgins for consideration in proposal review process.
- SOWs submitted after the due date 3/4/11 will not be incorporated in this initial assessment, and will be addressed time permitting.
- Marie Levine will supply the Letter of Commitment for use of ExEP Infrastructure.
- Pls are to include both the SOW and the Letter of Commitment in their proposal.

What happens after Proposals are awarded?

Marie Levine will convene the Community User's Group (CUG) formed of the new and existing TDEM PIs to negotiate testbed schedules.






Statement of Work Questionnaire for use of ExEP Infrastructure



- 1. Brief description of the proposed TDEM
- 2. What facility/infrastructure is requested
- 3. Milestone (s) to be accomplished and performance goals
- Description of how the milestone work will be conducted (brief test / analysis plan)
- Period(s) and preferred dates over which the facility/ infrastructure is requested, stating whether in vacuum or air for testbeds. Include any time required for preparatory work.
- 6. A list of the personnel and expertise as supplied by your proposal who will assist in the use of the facility/ infrastructure. Provide level of effort for each person during the period the facility is being requested.
- 7. Anticipated changes to the baseline facility/infrastructure needed to accommodate your milestone demonstrations.
- 8. List of items needed for all testbed modifications. Identify items you will be procuring within your proposal's budget and provide approximate cost of needed items. If applicable, state that no additional procurements will be necessary for the use of the infrastructure under consideration.
- 9. If necessary, provide any other relevant information or constraints.

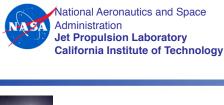

High Contrast Imaging Testbed - HCIT



Facility

- Vacuum Chamber L = 7.5'; Ø = 6'; P = 1 mTorr Seismically isolated, T-stabilized \sim 10 mK @ room temp.
- Achieved 3x10⁻¹⁰ contrast (narrowband)
- Wavefront control with 32x32mm Xinetics Deformable Mirrors w/ 1mm pitch. 64x64mm soon.
- Fiber/Pinhole "Star" Illumination
 - Monochromatic: 635, 785, 809 and 835 nm
 - 2, 10 and 20% BW around 800 nm center
 - Medium and High Power Supercontinuum Sources
- Low-Noise (5e⁻) CCD camera, 13 μm pixels
- Complete computer control w/ data acquisition & storage
- Safe & convenient optical table installation/removal
- Parallel in-air preparation & modifications to coronagraphs
- Remote access through FTP site

Test Capabilities

- LYOT Coronagraph configuration Table #1
 - -Band-Limited Occulting Masks
 - -Shaped-Pupil Masks
 - -Vector-Vortex Masks
- Phase-Induced-Amplitude-Apodization (PIAA) Coronagraph
 Table #2
- Narrow or broad band coronagraph system demos
- Investigation of novel system configurations (e.g., DM placement)
- Coronagraph model validation & error budget sensitivities



HCIT with Lyot Coronagraph Installed



HCIT with Lyot Coronagraph Installed







Micro-Arcsecond Metrology Testbed - MAM



- Take advantage of residual SIM vacuum chamber & hardware
 - 40' Micro-Arcsecond Metrology (MAM) Chamber w/ \$15M of equipment
- Being re-fitted for Starlight Suppression testing in FY'11
- Increases testing efficiency by avoiding table transfers:
 - Table #2 (PIAA) in MAM
 - Table #1 (Lyot) in HCIT
- Minimizes scheduling constraints for accommodating multiple TDEM demonstrations

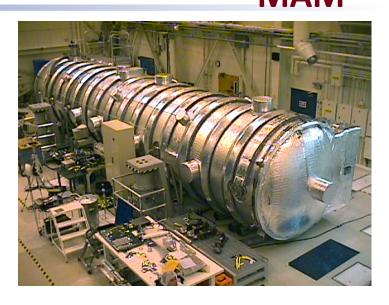

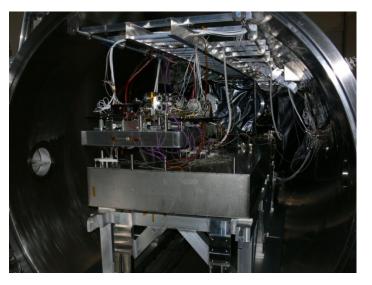



APEP: Visible Nulling



Vacuum facility co-located w/ HCIT & MAM

- · Optical layout as shown on the right
- Includes DM, pupil and science cameras
- Leverages technology development from TPF-I. Gemini Planet Imager, and SIM

16-Bit DM Electronics for Vacuum

- Minimizes feed-throughs into vacuum tank
- Designed for Boston Micromachines segmented DM
- Conductively cooled electronics and chassis

Coherent Fiber Bundle and Lens Array


- Prototype of 217 fibers, with map of fiber positions
- · Fiber bundle & lenslet array now integrated
- System performance demonstrated


Control System Based on RTC

- · Real-time phase retrieval demonstrated
- DM control better than 5nm





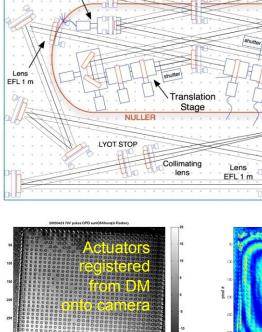

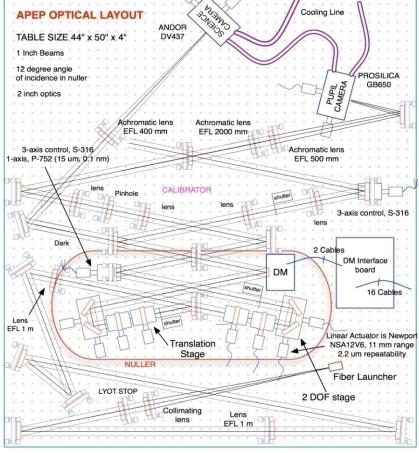





Vacuum Surface Gauge for Accurate Wavefront Measurement and Deformable Mirror Calibration



- Customized Michelson Interferometer set-up
 - ➤ Reference mirror w/ absolute position feedback
 - Frequency stabilized laser source
- Camera pixel size: 100 microns equiv. on surface to be measured
- Dedicated algorithms for wavefront extraction over > 10⁶ pixels
- Demonstrated optical surface measurement Accuracy: << 1 nm rms
- Presently limited to optics and deformable mirrors < 4" diameter
- Operates in vacuum within HCIT lower level
 - Concurrent measurement w/ other coronagraph experiments
- Now being used for detailed calibration of Xinetics DMs influence function & linearity
- User provides electronic drivers and feedthrough cables

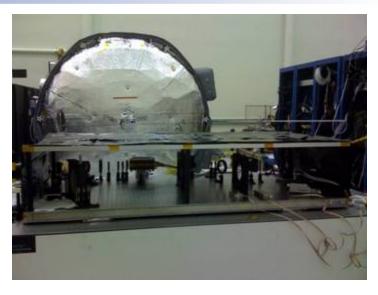

Surface Gauge bench fits into lower mezzanine of HCIT

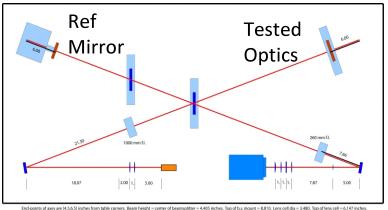

Surface Gauge optical layout




Wavefront Sensing & Control



Nulling Algorithms

- Electric Field Conjugations (EFC) algorithms exist for single and dual DM control
- Demonstrated to < 10⁻⁹ contrast and 20% BW
- Applicable for Lyot, Shaped Pupil, Vortex & PIAA
- Coupled to HCIT coronagraph models and DM calibration data for optimal efficiency

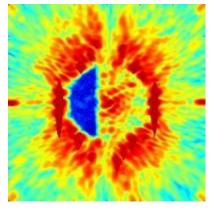

Best Results to Date

Band-Limited Coronagraph: 6e-10, @ 4 \(\mathcal{D} \)D with 10\(\text{light} \) 1.2e-9, @ 3 \(\mathcal{D} \)D with 10\(\text{light} \) 2.7e-9, @ 3 \(\mathcal{D} \)D with 20\(\text{light} \)

Shaped-Pupil Coronagraph: 1.16e-9, @ 4 λ /D with 2% light 2.4e-9, @ 4 λ /D with 10% light

Vector Vortex Coronagraph: 2e-7, @ 3 λ/d with 2% light

Deformable Mirrors

- Xinetics DMs available for single and 2 DM tests:
 - 32x32mm (3) & 64x64mm (1)
 - 48 x 48 mm (2) but no electronics available
 - Continuous Fuse Silica facesheet polished to $\lambda/100$ rms
 - Surface stable to 0.01 nm rms over > 6 hours in vacuum

Test Capability

- Proposed experiments can capitalize on existing WFS&C capabilities to complement starlight suppression demonstrations
 - New coronagraph demonstrations w/ existing S/W & DM
 - New algorithm demonstration w/ existing DMs
 - New DM demonstrations on existing coronagraph
 - Proposer to provide DM electronics, calibration data and any new H/W for HCIT optical configuration
 - Apply EFC to novel coronagraph <u>models</u> to determine by analysis if there are any limitations to broadband contrast and to look for advantages/disadvantages of the coronagraph in terms of WFS/C.

EFC Nulling and current performance

Xinetics Deformable Mirrors 64x64 48x48 PMN deformable array, used for all 64x64 array to be 48x48 array (also e) will be used to

Xinetics DM



Coronagraph Modeling & Error Budgets



Coronagraph Modeling


- Multiple models and tools are available:
 - Optical diffraction tools with Fresnel propagation and active wavefront control for simulations of broadband contrast performance
 - •Includes mask transmission errors, alignment & optical figure errors, nulling algorithms w/ deformable mirror influence functions
 - Lyot and PIAA propagation models are available
 - HCIT Testbed models for Lyot and PIAA
 - Mission simulation, orbit determination, spectra characterization

Generalized Error Budget Tool

- Automated error budget tool for any internal coronagraph system:
 - observatory tolerances to back-end contrast
- Based on diffraction analyses of specific coronagraphs (Lyot, PIAA, Vortex) & sensitivities of actual optical prescriptions
- Near-seamless integration of Matlab-code and Excel macros for rapid prototyping


TDEM application

- Specifying Milestone performance goals tied to flight missions
- Defining testbed error budgets and sensitivities for model validation

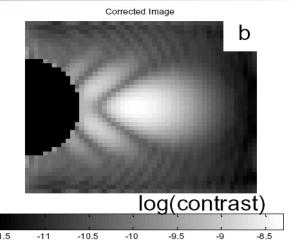

PIAA residual image after DM correction (Shaklan SPIE 2007)

Coronagraph Error Tree:

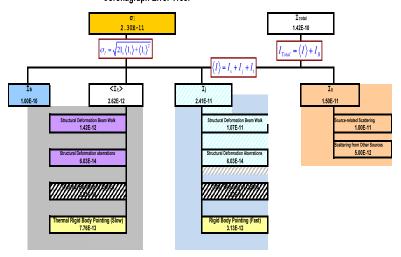

Coronagraph Error Budget Tool Screenshot




Integrated Modeling Tool: CIELO



General-purpose finite element computational tool for multi-physics analysis:

Thermal - Structures - Optics - Control

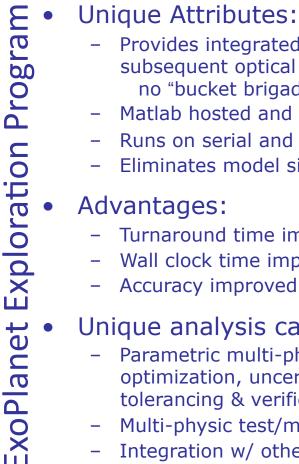


- Provides integrated common thermal & structural model w/ subsequent optical aberrations:
 - no "bucket brigade" or mesh interpolation
- Matlab hosted and Nastran input file driven
- Runs on serial and parallel machines
- Eliminates model size limits of COTS thermal codes


Advantages:

- Turnaround time improved via common model
- Wall clock time improved via parallel computing
- Accuracy improved w/ finer mesh & double precision


Unique analysis capabilities

- Parametric multi-physics sensitivity analysis for performance optimization, uncertainty quantification, error budget tolerancing & verification
- Multi-physic test/model correlation
- Integration w/ other domain (eg controls)

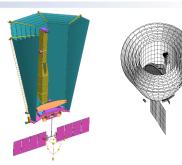

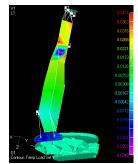



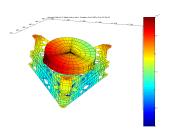



External Occulter Modeling




•Large scale optical diffraction models to simulate the effect of petal deformations and imperfections on contrast

- Models built for representative design and validated against THEIA results
- Efficient algorithm can handle large problems




- Single model for thermal & structures w/ high fidelity at petals edges – no extrapolation
- Perform transient slew & settle thermal deformation analysis
- Investigate damping and nonlinear joint dynamics
- Perform parametric sensitivity analyses to material property distributions, for performance optimization...
- Validate models against sub-scale test articles



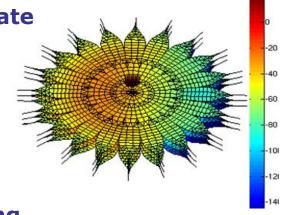

Thermal model (°C) of 3layer flat external occulter w/ Sun at 5°

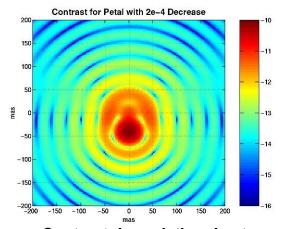

Contrast degradation due to 1mm width change in a single petal (20 petals, 54m tip-tip occulter)





Large Deployable Structures Precision Environment Test Enclosure (PETE)



Facility

- Tests deployment accuracy and stability of large structures
- Dimensions: 10-m x 5-m x 3-m
- Stable environment for testing:
 - Thermal Stability: < 0.01 K/hr, <0.02 K/24 hrs
 - Vibration: < 75 micro-g rms (0-500 Hz)
 - Acoustics: 35 dbA
 - Relative Humidity Stability: 1%
- Cabling Pass thru for external electronics
- Active thermal control
 - <5 min for air temperature stabilization (30 min from cold start)</p>
 - Up to 1 KW heat load while maintaining performance
- Optical table available for additional isolation
- Class 100,000 clean room capable
- Wall and ceiling mounting possible

Measurement Capabilities

- Scanning Laser Vibrometer
- Labview data acquisition and control
 - 50 high speed simultaneous sampling for accelerometers
 - Experimental control via custom UI
- Laser Holography system for in-plane or out-of-plane deformations of 10 nm to 25 microns.
- Videometry for <0.5 mm measurements at up to 16 frames/second for 20 min.
- FLIR thermal imaging camera
- Modal test exciters and ID software.










SABUR 9-m deployable in PETE

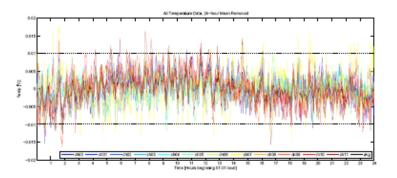

PETE Thermal Stability: <0.02 K per 24 hrs (with a 1 KW heat load)



JPL Cryogenic Dilatometer




ExoPlanet Exploration Program

- Measures strain and CTE of precision materials at any temperature from 310°K to 20°K
- Vacuum facility with precision interferometer metrology system
 - Capable of ppb accuracy and repeatability (sub-nm relative elongation)
- Experiments can be performed over multiple temperature cycles
- Temperature can be maintained for very long periods to mK stability
 - For studying dimensional stability and thermal relaxation
 - Temperature cooling rate can be controlled
- Materials characterized includes: Zerodur©,
 ULE©, Single Crystal Silicon, SiC, Invar, PMN, ...
- Also used for characterizing piezo-electric actuators at cryogenic temperatures





JPL Cryogenic Dilatometer

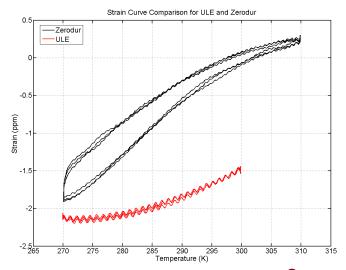

Multiple cycles of Zerodur[©] & ULE [©] at room temperature



Exoplanet Program Point of Contact



For questions concerning use of ExEP technology infrastructure contact:

Dr. Marie Levine
Jet Propulsion Laboratory
4800 Oak Grove Drive

Pasadena, CA 91109

Telephone: (818) 354-9196

Email: Marie.Levine@jpl.nasa.gov